

Caméscopes - Cassette mini-DV

Téléchargement vers Mac								
Utilisation iMovie09 DV/HDV vidéo *		Utilisation iMovie09 DVD Vidéo/AVCHD vidéo *		Utilisation CW		Utilisation des fonctions standard de l'OS (ImageCapture)		
Mac OS X 10.6								
OS		USB				USB		
I/F	IEEE1394	AVCHD	SD card AVCHD	Card/Movie	Card/Still	Card/Movie	Card/Still	
MV20(i)	Supporté	---	---	---	---	---	---	
MV200(i)/MV210		---	---	---	---	---	---	
MV3(i)		---	---	---	---	---	---	
MV3(i) MC		---	---	---	---	---	---	
MV30(i)		---	---	---	---	---	---	
MV300(i)/MV310		---	---	---	---	---	---	
MV4(i)		---	---	---	---	---	---	
MV4(i) MC		---	---	---	---	---	---	
MV400(i)/MV410		---	---	---	---	---	---	
MV430(i)/ MV425		---	---	---	---	---	---	
MV450(i)		---	---	---	---	---	---	
MV5(i)		---	---	---	---	---	---	
MV500(i)/MV510/M V490		---	---	---	---	---	---	
MV530i		---	---	---	---	---	---	
MV550i		---	---	---	---	Non supporté*	---	Supporté
MV5iMC		---	---	---	Non supporté	---	Non supporté	Non supporté
MV600(i)		---	---	---	---	---	---	---
MV630i		---	---	---	---	---	---	---
MV650i		---	---	---	Non supporté	Non supporté	Non supporté	Non supporté
MV6iMC		---	---	---	Supporté *1	Supporté *1	Supporté	Supporté
MV700(i)/MV690		---	---	---	---	---	---	---
MV730i		---	---	---	---	---	---	---
MV750i		---	---	---	Supporté *1	Supporté *1	Supporté	Supporté
MV800(i)/MV790		---	---	---	---	---	---	---
MV830(i)		---	---	---	---	---	---	---
MV850i		---	---	---	Supporté *1	Supporté *1	Supporté	Supporté
MV880X(i)		---	---	---	---	---	---	---
MV920 / MV901 / MV900 / MV890		---	---	---	---	---	---	---
MV940 / MV930		---	---	---	---	---	---	---
MV960 / MV950		---	---	---	Supporté *1	Supporté *1	Supporté	Supporté
MVX1(i)		---	---	---	---	---	---	---
MVX100i		---	---	---	Non supporté	Non supporté	---	Non supporté
MVX10i		---	---	---	Supporté *1	Supporté *1	Non supporté	Supporté
MVX150i		---	---	---	Non supporté	Non supporté	---	Non supporté
MVX1S(i)		---	---	---	---	---	---	---
MVX200(i)		---	---	---	---	---	---	---
MVX20i		---	---	---	Supporté *1	Supporté *1	Supporté	Supporté
MVX250i		---	---	---	---	---	---	---
MVX25i		---	---	---	---	---	---	---
MVX2i		---	---	---	Non supporté	Non supporté	Non supporté	Non supporté
MVX300		---	---	---	---	---	Supporté	---
MVX30i		---	---	---	---	---	Non supporté	---
MVX330i	---	---	---	---	---	Supporté	---	
MVX350i	---	---	---	---	---	---	---	
MVX35i	---	---	---	---	---	Non supporté	---	
MVX3i	---	---	---	Supporté *1	Supporté *1	Non supporté	Supporté	
MVX40(i)	---	---	---	---	---	---	---	
MVX45i	---	---	---	---	---	---	---	
MVX460 MVX450 / MVX430	---	---	---	---	---	Supporté	---	
MVX4i	---	---	---	---	---	---	---	

Supporté
 Supporté *1
 Non supporté *1: CameraWindow ne démarre pas
 Non supporté Not recognized
 --- Fonction non présente

Reconnu
[Installation Rosetta.](#)

© Copyright 2010 |

[Mentions légales](#)